


## Preliminary Work

### WARNING!

- Open the fuel tank cap, ventilate the tank.
- Close the tank cap again.
- Disconnect the battery "earth" or "ground" connection.
- Depressurize the cooling system.
- Copy the factory number from the original type label to the duplicate type label.
- Remove years that do not apply from the duplicate label.
- Attach the duplicate label (type label) in the appropriate place.
- Remove the underbody protection on the right and left (if present).
- Remove the fuel tank (only on vehicles without installed auxiliary or parking heater).
- Remove the fuel-tank sending unit in accordance with the manufacturer's instructions (only on vehicles without installed auxiliary or parking heater).
- Remove the trim on the front passenger side entrance (only with recirculating air mode).
- Remove the lower instrument panel trim on the driver's side.

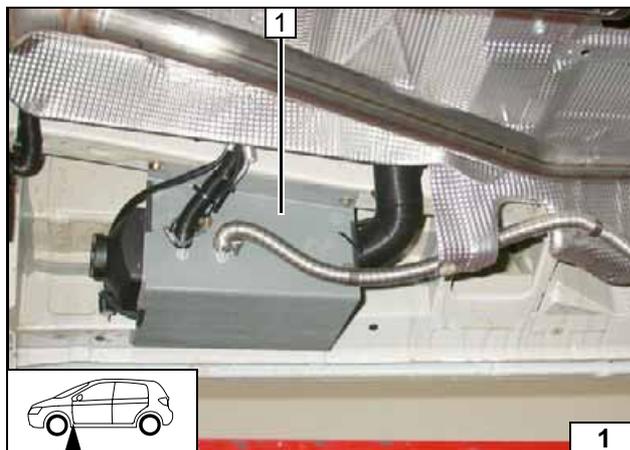

### Heater installation location

1 Heater

Installation location